STREET EDGE

& BEYOND

COAXIAL SPEAKER USER GUIDE

INTRODUCTION

This instruction manual is for your safety and must be adhered to at all times. Please read and ensure that you fully understand the installation and set up procedures as explained. If you are unclear on the installation or set up of your EDGE speakers please contact your nearest authorised EDGE dealer.

Contents

2 x EDGE speakers.
2 x Grills.
8 x Fixing screws.
1 x Cut out template.
2 x Lengths of speaker cable.
Warranty card

WARNING

DO NOT EXPOSE THIS PRODUCT TO DAMP OR MOISTURE - doing so may result in fire, shock or damage to the product.
BEFORE WIRING DISCONNECT THE CABLE FROM THE POSITIVE BATTERY TERMINAL - failure to do so may result in electric shock or injury.
ENSURE GOOD AND CORRECT CONNECTIONS - failure to make the correct connections may result in fire or damage to the product.
DO NOT USE ANY FUNCTIONS OF THIS EQUIPMENT THAT MAY TAKE YOUR CONCENTRATION AWAY FROM DRIVING YOUR VEHICLE - do not set up your amplifier whilst driving, doing so may result in an accident. For prolonged setting up, make sure that your vehicle is stationary and in a safe location.
KEEP THE VOLUME AT A LEVEL SO YOU CAN STILL HEAR OUTSIDE NOISE - failure to do this may result in an accident. EDGE equipment is capable of producing sound levels that can permanently damage your hearing. EDGE recommends caution when listening at high volume. For safe and enjoyable listening the sound should be comfortable and clear without distortion.

CAUTION

Never connect any speaker lead to the car chassis. This can cause severe damage to your speaker /car radio /amplifier.
Before drilling or cutting any holes, investigate the layout of your vehicle thoroughly.
Use caution when working near the fuel / hydraulic lines and electrical wiring.
Observe the correct polarity when wiring, improper phasing may cause a loss of bass response.
Ensure that no moving parts catch on the speaker or grill (e.g. window or door handles, or window glass inside the door)

Installation

The quality of the installation will affect the system performance and reliability.
Contact your nearest authorised EDGE dealer if you are unsure about the installation of this product.
Please mount this unit away from any potential hazards.
Minimising the length of wires will provide higher audio output from the system.
The speaker should be securely fastened to the mounting position using the screws provided.
Pre drill your mounting holes using a drill and position with the template provided.
Be sure to investigate your mounting area thoroughly for electrical wires, brake or fuel lines or fuel tank to prevent causing any damage.

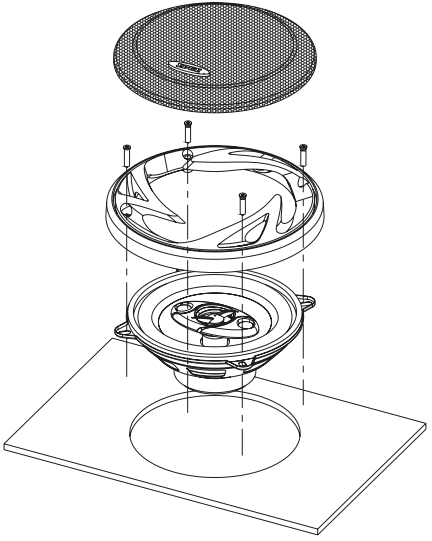

Firstly, make sure that the speakers will fit in your chosen location. This may involve the removal of the standard vehicle speakers. Please use the mounting depth and hole cut dimensions as detailed in this manual for guidance.

Speaker Installation

If necessary cut any material away to allow the speaker to sit correctly.

Cut out the mounting hole and pre-drill any other fixing holes.

If the grill is to be fitted, screw through both gasket and speaker using the screw provided until the speaker is securely fastened.

Grill Removal

The EDGE speakers feature a removable mesh grill. Please follow the instructions below to remove the grill.

1) Remove the gasket from the basket
2) Remove the mesh grill
3) Refit the gasket.

Wiring Examples

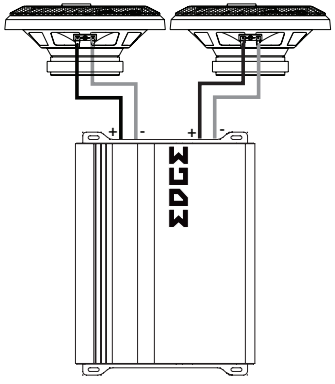

ED209 connected to amplifier (ED7400/ ED7800/ED71600)

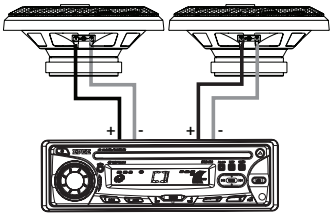

ED206 connected to ED901 CD/Tuner

Limited Warranty

All EDGE goods are covered by a full 12 months manufacturers warranty. Valid from the date of the original receipt and proof of purchase. In order to validate this warranty, the warranty card should be returned to EDGE within seven days of the original purchase date. The original receipt and packaging should also be kept for this 12 month period.

If at any stage during the warranty period you have a problem with the product then it should be returned to the point of purchase in its original packaging, complete and with no items missing.

If the store is unable to fix the product it may have to be returned to EDGE this process takes around 7 working days.

A full description of EDGE's warranty information can be found on our website:
www.edgecaraudio.com/warranty

A written version can also be obtained from
EDGE warranty department
PO Box 11000
B75 7WG

Copyright

All content included in this manual such as text, graphics, logos, icons, images data, the selection and arrangement thereof, are the property of EDGE Audio (herein referred to as "EDGE", "us" or "we") and its affiliate or their content and technology providers, and are protected by United Kingdom and International copyright laws. All rights reserved.

Trademarks

EDGE ED2™, EDGE ED3™ , EDGE ED4™ , EDGE ED5™ EDGE ED6™ , EDGE ED7™, EDGE Street™ and EDGE Loud™ and all stylised representations of product names, or the abbreviations of product names, as logos are all trademarks of EDGE. Graphics and logos are trademarks or trade dress of EDGE Audio or its subsidiaries.

EDGE's trademarks and trade dress may not be used in connection with any product or service that is not EDGE's, in any manner that is likely to cause confusion among customers or in any manner that disparages or discredits EDGE. All other trademarks not owned by EDGE or its subsidiaries that appear in this manual are the property of their respective owners, who may or may not be affiliated with, connected to, or sponsored by EDGE or its subsidiaries.

We reserve the right to make needed changes or improvements to the produc and this manualt , without informing the customer about this in advance

Model	**ED204**	**ED205**	**ED206**	**ED209**
Type	Coaxial	Coaxial	Coaxial	Coaxial
Configuration	4 way	4 way	4 way	4 way
Speaker size	4" (100mm)	5.25" (130mm)	6.5" (165mm)	6x9" (150 x 220mm)
RMS power	40 watts	50 watts	60 watts	100 watts
Peak power	120 watts	150 watts	180 watts	300 watts
Minimum input	20 wRMS	25 wRMS	30 wRMS	50 wRMS
Sensitivity	83.9dB	86.2dB	86.2dB	86.1 dB
Frequency response	100Hz – 20KHz	80Hz – 20KHz	65hz – 20KHz	45Hz- 20KHz
Mounting depth	43mm	47mm	55mm	72mm
Mounting diameter	94mm	118mm	144mm	150x220mm
Recommended amplifier	ED7400/7800 ED71600	ED7400/7800 ED71600	ED7400/7800 ED71600	ED7400/7800 ED71600

EDGE
AUDIO
LIVE
BY IT